105mm

110mm

Set Up Instructions

1. Select your laptop manufacturer and compatible tip(s) from the chart below.

2. Check that the selected tip fits your laptop.

3. Check the bottom label of your laptop for voltage level.

Go to the bottom of this power adapter and adjust the color coded selector switch according to your laptop voltage.

17-21V – Leave it at **Green**
14-17V – Use a pen to switch to **Blue** setting (See image below)

Take a tip listed in the table below that matches your laptop and the color selected above.

Plug it into the DC plug as shown below.

4. Need help? Visit **www.kensington.com**.

Laptop Manufacturer	Color Code	Compatible Tip(s)
Acer®	Blue Green	C D, E, H
Asus®	Green	E, H
Compaq®	Green	E, H, I
Dell®	Green	H, J
Fujitsu-Siemens	Green	H
HP®	Green	E, H, I
IBM®	Blue Green	C L
Lenovo®	Blue Green	C H, L
Samsung®	Blue Black Green	B G* O
Sony®	Black	G*
Toshiba®	Blue Green	B H

If a tip fits in your laptop but does not charge when plugged in please try the other compatible tips.

*Tip G located in Sony Users bag

Voltage selector switch

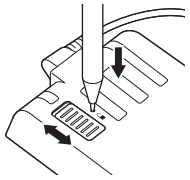

GREEN for 17-21 VDC
BLUE for 14-17 VDC

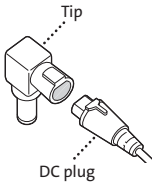

900-3997-00

TAZUMADESIGN

DATE: 5/4/2010
JOB#: KENSINGTON 311
DESCRIPTION: FUSSION PLUS (K38078) - SET UP INSTRUCTIONS LABEL - EU
CPN: 900-3997-00

BLACK

DIELINE